
C € F© ØROHS

Important: Read All Instructions Prior to Installation

Function introduction

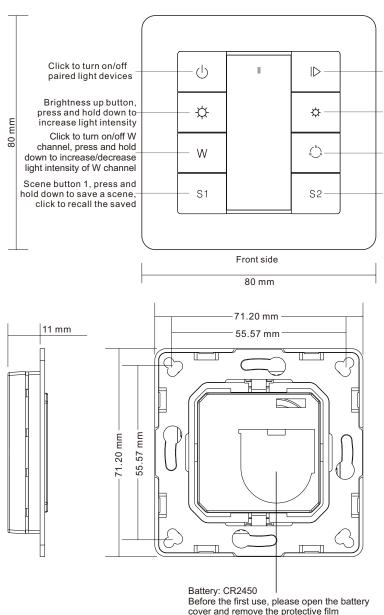

1 RGB color changing mode, click to play/pause the mode, press and hold down to speed up/down the mode

Brightness down button, press and hold down to decrease light intensity

RGB color button, press and hold down to get the color you would like

Scene button 2, press and hold down to save a scene, click to recall the saved

Product Data


Output	RF+Bluetooth signal
Operation Frequency	2.4GHz
Power Supply	3V(1xCR2450 battery)
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	80x80x13.6mm

- RF+Bluetooth RGBW remote
- · Control 1 zone of RF+Bluetooth receiver
- Enables to save and recall 2 scenes for each zone
- Easy & quick pairing to the RF+Bluetooth receivers by simply pushing the buttons
- · Mesh network for further control distance, receivers can transmit signal to each other
- · Each remote can control numerous receivers
- Each receiver can be paired to max. 8 remote controls
- The controlled receiver status can be quickly synchronized to the smart APP
- Transmission range between every two neighbor devices up to 30m
- Bluetooth low power consumption technology, long battery life
- Waterproof grade: IP20

Safety & Warnings

- This device contains a button lithium battery that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

Pair with RF+Bluetooth receiver

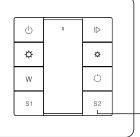

Step 1:Do wiring the RF+Bluetooth receiver according to wiring diagram(please refer to the instruction of RF+Bluetooth receiver that you would like to pair with.



Step 2:Click the "Prog. Key" or "Reset" button on RF+Bluetooth receiver (or reset power of the receiver 3 times continuously if the button is not accessible) to set it into pairing to RF remote status

Step 3:Click any button of the remote(e.g. button \$2), LED lights connected with the receiver flicker means the receiver is paired with the remote successfully.


Note: one receiver can be paired with max 8 remote controls.

Installation

1. Remove battery insulator






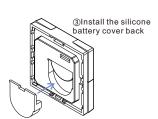


Back side


2.Install the controller to wall(2 methods)

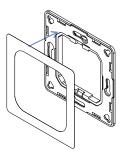

Method 1:Stick 3M glue on the back of the bracket and then stick the bracket to the wall

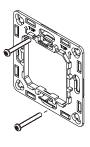

Method 2:Screw the bracket to the wall

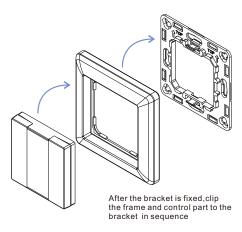

The key part of this controller is a universal, standard size design switch element that can be integrated in numerous frames by different manufactures as below list:

BEKER	S1, B1, B3, B7 glass
GIRA	Standard55, E2, Event, Esprit
JUNG	A500, Aplus
MERTEN	M-smart, M-Arc, M-Plan